



Dummy Camera



Ceiling Mount Bracket



Screw & Anchor Pack

THIS PACKAGE CONTAINS:

- 1 x Dummy Camera
- 1 x Ceiling Mount Bracket
- 1 x Screw and Anchor Pack

FEATURES

- Excellent Economical Deterrent
- Flashing Indicator Light Provides Real Authentic Look*

* Flashing indicator light function requires 2 x "C" type batteries. Not included.

The Lorex Simulated Security Dome Camera is an affordable and effective theft deterrent device. It looks like a real surveillance camera with its flashing red indicator, imitation lens and dome construction. Mount the simulated security camera in a visible area on a ceiling or wall to deter possible thieves and intruders.

INSTALLING BATTERIES

The Simulated Security Camera requires two "C" batteries (not supplied) if using the flashing red LED. The dome is also effective without the flashing LED as some models of actual Security Cameras do not have a flashing LED.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities

1. Remove the four (4) black Holding screws from the Dome Cover, and remove the cover.

NOTE: The simulated security screws are for show only, and are not removable.

2. Remove the two (2) silver screws holding the Simulated Lens to the Base. Remove the Lens component to access the Battery Compartment.

3. Place the batteries in the compartment as indicated by the polarity symbols(+ and -) marked inside.


4. Reattach the Lens Component to the base with the two (2) silver screws. Set the switch to ON to start the RED LED blinking. Replace the Dome Cover, and secure with the four (4) black screws.




INSTALLING THE SIMULATED (DUMMY) SECURITY CAMERA

1. Installing the Wall Mount Bracket:

- Using the mounting base plate as a template, use a pencil to mark the position of the three (3) screw holes on the mounting location.
- Drill 1 inch holes in the marked positions.
- If necessary, insert the supplied drywall anchors into the screw holes
- Insert a 1 inch screw (provided) through each of the three (3) screw holes in the mounting base plate and into the mounting surface, then tighten the screws.

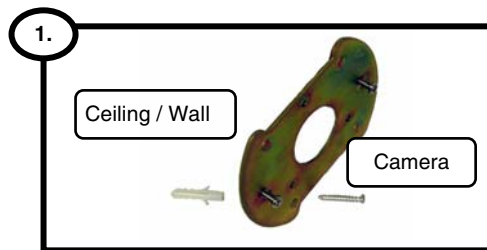

- ## 2. Position the camera onto the base plate using the two (2) silver screws as a guide. Twist the dome camera onto the base plate to secure in place.

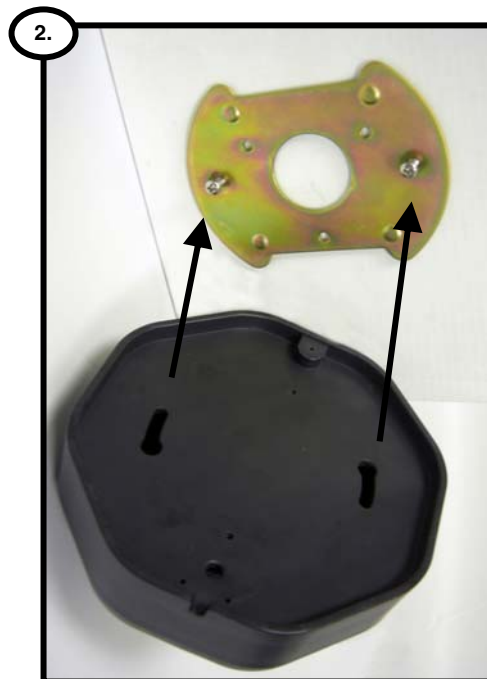

CAMERA CARE:

Keep the simulated security camera dry. If it gets wet wipe it dry immediately. Use and store the simulated security camera only in normal temperature environments. Handle the simulated security camera carefully; do not drop it. Keep the simulated security camera away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new

Modifying or tampering with the simulated security camera's internal components can cause a malfunction and might invalidate its warranty

BATTERIES:

Warning: Dispose of old batteries properly. Do not burn or bury them.

Caution: If you do not plan to use the simulated security camera with batteries for a month or more, remove the batteries. Batteries can leak chemicals that can destroy electronics parts

SPECIFICATIONS

Power Source:	DC 3V (2 "C" batteries)
Alkaline Battery Life:	About 4 months
Weight (without batteries)	0.60 lbs / 0.27 kg
Weight (with batteries)	0.95 lbs / 0.45 kg
Dimensions: (W x H x D)	5.2" x 5.2"x " x 3.9" 132mm x 132mm x 100mm

VISIT
www.lorexcctv.com

LOREX Technology Inc.

Copyright © 2007 LOREX Technology Inc. As our products are subject to continuous improvement, LOREX and its subsidiaries reserve the right to modify product design, specifications and prices, without notice and without incurring any obligation. E&OE

It's all on the web

- Product Information
- Specification Sheets
- User Manuals
- Software Upgrades
- Quick Start Guides
- Firmware Upgrades

